



## OPERATING & SAFETY GUIDE

### FREEZERS

240VOLT

Product Code  
18025

#### GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

**Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.  
Never operate electrical switches with wet hands.**

**Always switch off and unplug the equipment from the power supply before moving or cleaning.**

**Check the equipment before use, if it shows signs of damage request a replacement.**

#### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply. If the equipment fails to operate or the power cable or plug become damaged, contact Event Furniture Limited. Do not try to repair it yourself. Keep the power cable out of harm's way.

Extension leads should be unwound fully, never

run them through water, over sharp objects or where they may be a trip hazard. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

#### OPERATING GUIDE

Position the unit where it is to be used, well away from any heat source and with sufficient clearance all round for air circulation. Ensure that it is level. Apply the brakes on the braked castors if fitted.

It is important that after the unit has been positioned, it is allowed to settle for at least 20 minutes before it is switched on. Failure to do so can damage the unit. Do not move or tilt the unit during use.

Plug in the cabinet. The display shows the actual cabinet temperature and indicates that the power is connected.

#### Temperature Setting

Push the temperature control button  $\pm$  once to see the temperature setting, the display will show the set temperature.

Push this button once more, or keep it pressed for more than 1 second, the temperature value will change in steps of 1 degree C. When the display shows the desired temperature value, release the button and the setting has been made.

During setting of the temperature value, the digits in the display flash. The control will automatically return to normal display if the button has not been used for more than 5 seconds.  
#

### **Temperature Alarm**

The control is fitted with a temperature alarm that monitors the cabinet temperature. If the cabinet temperature exceeds the alarm value for more than 90 minutes, the display starts flashing and simultaneously the highest temperature during the alarm period is displayed. The alarm is stopped by pushing the control button  $\pm$ . Then the display will show the cabinet temperature.

Alarm Temperature: 6 degrees C above the set temperature.

### **Power Failure**

In case of disconnected power supply, the control will always return to the user set temperature.

Startup with temperature above alarm temperature: The compressor starts immediately. The display shows the alarm temperature until  $\pm$  is pushed, then the actual cabinet temperature is displayed.

Startup with temperature below alarm temperature: The compressor starts after 10 minutes. The display shows the actual temperature until the setpoint is reached.

### **EQUIPMENT CARE**

When not in use, switch off and unplug the unit, then empty the contents. If the unit is to be unused for any length of time, store it with the door propped ajar or the unit may acquire a musty smell. DO NOT move or tilt the unit for a minimum of 20 minutes after switching off, to allow the unit to settle.

Allow to thaw before thoroughly cleaning the interior, ready for return to Event Furniture Limited.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the surface.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

After cleaning with a mild detergent, always remove any residue with a damp cloth and wipe dry.

### **ANY PROBLEMS**

Contact: Event Furniture Ltd. 01922 628961

Event Furniture Limited,  
Unit2, Maple Leaf Industrial Estate,  
Bloxwich Lane, Walsall,  
West Midlands, WS2 8TF