



OPERATING & SAFETY GUIDE

HAND WASH UNIT

240VOLT

Product Code
19005

GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

**Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.
Never operate electrical switches with wet hands.**

Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply. If the equipment fails to operate or the power cable or plug becomes damaged, contact Event Furniture Limited. Do not try to repair it yourself. Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock. Ensure the water boiler and power socket are switched off before plugging in.

OPERATING GUIDE

Position the unit where it is to be used and ensure that it is level. Ensure the surface is strong enough to take the weight when full, the unit is heavy when full.

The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked.

Always put water in the unit before switching on.

Lift out the bowl by the edges, raising it off the upper section and sliding it up to the water spout. When it is high enough, rotate the bowl & tap to the right (anticlockwise) until it is clear of the opening of the upper section.

Lift out the waste container, remove the lid and ensure that it is empty.

Replace the waste container and then the bowl, reversing the process when lifting it out. Ensure that it is snugly back in place.

To fill, release the catches situated either side of the unit that secure the upper section to the lower. Lift the upper section until it is clear of the lower section, noting 2 cut-outs in the bottom edge. These are to be positioned on the left side of the top edge of the lower container giving a resting position and allowing hands free access for filling.

Pour clean potable water into the lower section. **Never fill beyond the MAX fill mark (10L) or water will flow from the overflow.**

When the lower section is filled, replace the upper section, both container seams should be lined up. Re-latch the catches ensuring the wire retainers are situated above the cleat on the upper section. Be careful not to trap fingers when the catch snaps into place.

Plug the unit into the electrical supply and the light will illuminate to indicate power to the unit. **Put your foot into the black plastic moulding located at the bottom of the unit to operate the handwash. Run the handwash two cycles, this will prime the pump. NO WATER WILL BE DISPENSED UNTIL THIS HAS TAKEN PLACE.**

The unit takes approximately 15 minutes to reach full temperature. The unit is now ready for operating.

HAND WASHING

To operate, place your foot into the black plastic moulding at the front of the lower section. This activates an infra red beam which in turn pumps water out of the dispensing nozzle for a period of approximately 7 seconds. The operation can be repeated by momentarily putting your foot back into the moulding once the previous pouring has stopped.

When water stops dispensing from the nozzle, when activated, the lower tank may be empty and the unit should be switched off and unplugged from the power supply.

Remove the bowl and empty the waste container as previously instructed. **IMPORTANT:** It is essential that this is carried out before re-filling the lower container.

Replace the bowl and re-fill the lower container as previously instructed.

If the unit will not dispense but water remains in the lower section, please check that the hose is securely attached to the upper section pipe. If this does not resolve the problem, call Event Furniture Limited.

The heating element is fitted with a thermal cut-out which protects the unit from damage if it is allowed to boil dry or switched on when empty. The cut-out re-sets automatically as the boiler cools down.

AFTER USE

Operate the foot switch until the lower section is empty.

Switch off and unplug from the power supply.

Empty waste container as previously instructed.

ANY PROBLEMS

Contact: Event Furniture Ltd. 01922 628961

Event Furniture Limited,
Unit2, Maple Leaf Industrial Estate,
Bloxwich Lane, Walsall,
West Midlands, WS2 8TF