



## OPERATING & SAFETY GUIDE

### HOT HOLDING CUPBOARD

240VOLT

Product Code  
19028

#### GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

**Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.**  
**Never operate electrical switches with wet hands.**  
**Always switch off and unplug the equipment from the power supply before moving or cleaning.**  
**Check the equipment before use, if it shows signs of damage request a replacement.**

#### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact Event Furniture Limited. Do not try to repair it yourself.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

#### OPERATING GUIDE

Position the unit where it is to be used and ensure that it is level. Apply the brakes on the two braked castors.

The unit is thermostatically controlled by a control knob, located on the front control panel. For best results, the following procedure is suggested:

Switch the red rocker switch to the on position.

Set the timer to the required setting (max 120minutes).

Set the thermostat to the required setting (max 90 degrees)

Pre-heat the empty Hot Holding Cupboard until the desired temperature is reached (approximately 30 minutes).

Load the Hot Cupboard as required. Many factors will determine the best control knob position, such as the amount and temperature of

the food loaded and the frequency of the opening and closing of the doors. Experience of use will soon show the best setting for any given occasion.

Set the thermostat at the required temperature, no further adjustment is necessary.

Stacked plates take a long time to heat through completely.

A Hot Cupboard is not designed to heat up or cook food, but to maintain it at a satisfactory temperature prior to serving.

### **CLEANING**

**After use, return the dials to zero, switch off and unplug the unit.**

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the steel.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Do not allow corrosive foodstuffs such as fruit juices, vinegar, mustards, pickles, etc., to remain on stainless steel for long periods. Wash and rinse away.

After cleaning with a mild detergent, always remove any residue with a damp cloth and wipe dry.

### **ANY PROBLEMS**

Contact: Event Furniture Ltd. 01922 628961

Event Furniture Limited,  
Unit2, Maple Leaf Industrial Estate,  
Bloxwich Lane, Walsall,  
West Midlands, WS2 8TF