



## OPERATING & SAFETY GUIDE

### WATER BOILER

240VOLT

Product Code  
19001

#### GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

**Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.**

**Never operate electrical switches with wet hands.**

**Always switch off and unplug the equipment from the power supply before moving or cleaning.**

**Check the equipment before use, if it shows signs of damage request a replacement.**

#### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Event Furniture Limited. Do not try to repair it yourself.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock. Ensure the water boiler and power socket are switched off before plugging in.

#### OPERATING GUIDE

Position the unit where it is to be used and ensure that it is level. Ensure the surface is strong enough to take the weight when full, the unit is heavy when full.

The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked.

Fill the water boiler up to the MAX mark with clean cold water, **DO NOT OVERFILL**. Plug the unit into the power supply and switch on, the "power on" lamp will illuminate.

Set the temperature control to 6 and wait for the water to boil. Once boiling, the thermostat will maintain the water temperature.

Dispense the hot water as required from the tap at the front of the unit.

**Never attempt to move the urn with hot or cold water inside, always drain the unit first, using the dispensing tap.**

## **EQUIPMENT CARE**

**Never use the unit for boiling anything other than water. It is not a tea urn.**

Always ensure there is sufficient water to cover the heating element, but never overfill or it could boil over.

**Do not let the unit boil dry, the heater element may burn out.**

Once you have finished with the unit, switch off and unplug. Allow the unit to cool completely before draining off as much water as possible via the dispensing tap. Any remaining water can then be tipped out.

Pour some clean cold water into the unit, swill it around the tank and run it off via the tap.

## **CLEANING**

**Disconnect from the mains supply before cleaning and allow the coffee percolator to cool.**

Wash out the urn using clean water and a soft cloth.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the steel.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Rinse thoroughly and finally wipe the exterior with a damp cloth.

## **ANY PROBLEMS**

Contact: Event Furniture Ltd. 01922 628961

Event Furniture Limited,  
Unit2, Maple Leaf Industrial Estate  
Bloxwich Lane, Walsall,  
West Midlands, WS2 8TF