



OPERATING & SAFETY GUIDE

Zeus Patio Heater

240VOLT

Product Code
16091

GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.

Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.
Never operate electrical switches with wet hands.
Always switch off and unplug the equipment from the power supply before moving or cleaning.
Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply. If the equipment fails to operate or the power cable or plug becomes damaged, contact Event Furniture Limited. Do not try to repair it yourself. Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

GENERAL SAFETY

- 1 Check that the voltage and frequency of your appliance match your mains voltage before plugging in. i.e. 220-240v AC 50Hz
- 2 This heater is hot when in use. To avoid burns DO NOT touch the grilles or heating element during use or attempt to move the heater.
- 3 Extreme care should be taken whenever the heater is left operating and unattended.
- 4 DO NOT operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner. Contact Event Furniture for advice.
- 5 DO NOT attempt to repair or adjust any electrical or mechanical functions.
- 6 Ensure the base is fitted and fully assembled, and the unit is upright on a flat stable surface before operating.
- 7 This heater is designed for use on Patios and in Beer gardens & smoking areas. The unit has been IPX5 Weatherproof approved; however, to prolong the life of the heater it is strongly recommended that the heater is stored in a shed or garage during heavy rain. When not in use always store in a dry area or cover the appliance with the cover provided.
- 8 DO NOT run power cord under floor covering, or cover with rugs or runners. DO NOT hide the power cord in long grass or leave close to an operating lawnmower. Arrange the cord away from areas where it may be tripped over.
- 9 DO NOT insert or allow objects to touch the heating element and never place anything on the heater safety guard (e.g. towels), as this may damage the heater and could cause an electrical shock or fire. Never use your heater to dry washing.

- 10 If the heating element has stopped glowing it may still be live, please check that the heat setting indicates the heater is off. Always disconnect your appliance from the mains before any cleaning or replacing tubes.
- 11 DO NOT use the heater in areas where petrol, paint, or other flammable substances are stored.
- 12 Always unplug the heater when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
- 13 DO NOT direct the heater towards curtains, furniture or other flammable objects and ensure that they are at least 1.5 metres from the front and 1 metre from the top back and sides.
- 14 Extreme care should be taken when any heater is used near children and pets.
- 15 DO NOT sit the heater on soft surfaces, where openings may become blocked. DO NOT cover.
- 16 Never locate the heater where it may fall into a swimming pool or other water container. Never use in a bathroom or shower room.
- 17 Do not use this heater in conjunction with a timer device or any other device, which facilitates unattended switch on.
- 18 The electrical cord must be fully unwound before use.
- 19 The front grille is intended to prevent direct access to the heating elements and must be in place when the heater is on.

OPERATING INSTRUCTIONS

Please Note: When the device is turned on, it will take a 1 minute to start heating & reach max power.

The heater should not be used in areas where surface water can rise above the level of the base as electronic parts are above this point.

- 1 If outdoors - Plug it into a waterproof outlet.
- 2 If indoors plug into a standard UK socket.
- 3 Only switch the unit on when the appliance is on a flat and stable surface.
- 3 Power On – take out the power cord from the back cover of body & connect to the power socket. The power indicator light will illuminate.

CONTROL PANEL

Function Button	Times pressed	Result	Light indicator
On/power	1	2700W	Middle orange
“	2	1350W	Left orange
“	3	1350W	Right orange
“	4	2700W (Repeat)	Middle orange
Economy & Safety Sensor	1	Sensor will operate & appliance will turn off if nobody is present for 4-5 minutes. It should restart if you walk in front of unit. If not use the control panel.	Green
“	2	Cancel	
Light	1	Illuminate	Light On
“	2	Cancel	Light Off

CLEANING

Switch off and unplug the unit.

Before moving or cleaning the unit, unplug from the power supply and wait for the unit to cool down.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the body of the unit.

Clean the heater using a soft cloth to wipe off any dust. If the heater is very dirty, use a damp cloth and wipe dry. Do not use bleach, any cleaning detergents, sprays or other chemicals as they will damage the unit.

When the heater is not in use for an extended period, clean & place in its cover & store in a dry place.

Warning: Do not light cigarettes or anything else using the heater element, as it will damage the heating element.

ANY PROBLEMS

Contact: Event Furniture Ltd. 01922 628961

Event Furniture Limited,
Unit2, Maple Leaf Industrial Estate
Bloxwich Lane, Walsall,
West Midlands, WS2 8TF